
RF Single Color Wall Mounted Controller


Important: Read All Instructions Prior to Installation


Function introduction

Click to turn on/off, press and hold down to increase/decrease light intensity

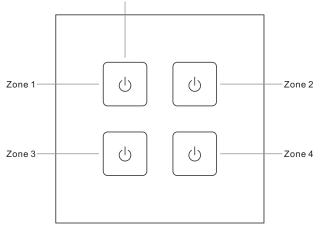

Front side

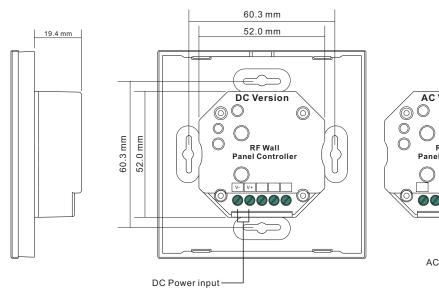

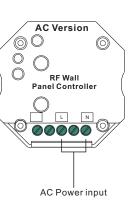

Product Data	DC Version	AC Version
Output Signal	RF signal	RF signal
Power Supply	12-24VDC	100-240VAC
Power consumption	< 20 mA	< 15 mA
Operating temperature	0-40°C	0-40°C
Relative humidity	8% to 80%	8% to 80%
Dimensions	86x86x29.1mm	86x86x29.1mm

Touch sensitive

70010110

Glass interface(white & black)


- Compatible with all universal series RF receivers, radio frequency: 868/869.5/434MHz
- · Control single color
- · Control 4 zone of RF receiver synchronously and separately
- · Back lighting for finding in the dark
- Waterproof grade: Ip20


Safety & Warnings

 
- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Wiring diagram

DC Version

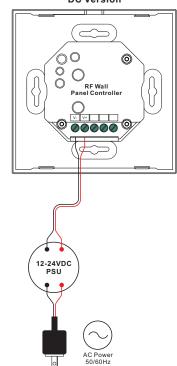


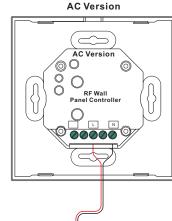



AC 100-240V

Pair with RF receiver

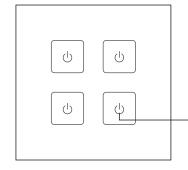

Step 1:Do wiring the wall panel & RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)



Step 2:Click the "Learning Key" button on RF receiver to set it into pairing status

• Step 3:Choose one zone and touch () button of the zone(e.g. zone 4), LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

Installation

