# **RF RGBW Remote Controller**

09.2811F.04737











Important: Read All Instructions Prior to Installation

### **Function introduction**

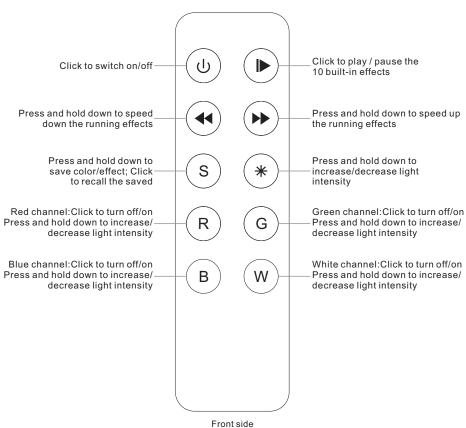

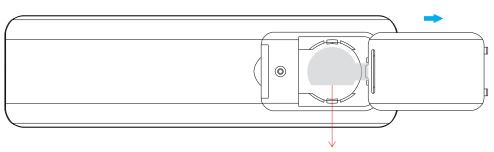

Note:Before the first use, please remove the protective film on the battery.

#### Back side

### **Product Data**

Output	RF signal
Operation Frequency	869.5/916.5/434MHz
Power Supply	3V(1xCR2025 battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	136.3x38.9x10.7mm

- Control 1 zone of receiver
- · RGBW color controller
- Waterproof grade: IP20

## Safety & Warnings

- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

### Operation

### Pair with RF remote:

Click "Learning Key" on the back of the wall panel controller  $\rightarrow$  Turn on the remote, then click  $\rightarrow$  LED lights connected with the back of the wall panel controller  $\rightarrow$  any other button of the remote  $\rightarrow$  wall panel will flicker once

### How to delete the pairing:

Power on the wall panel controller, hold the "Learning Key" on the back of the wall panel controller over 3 seconds.

The receiver is paired with the remote successfully.