



3 in 1 RF+Bluetooth Remote Controller

09.SB03G45C.04841



Important: Read All Instructions Prior to Installation


Function introduction

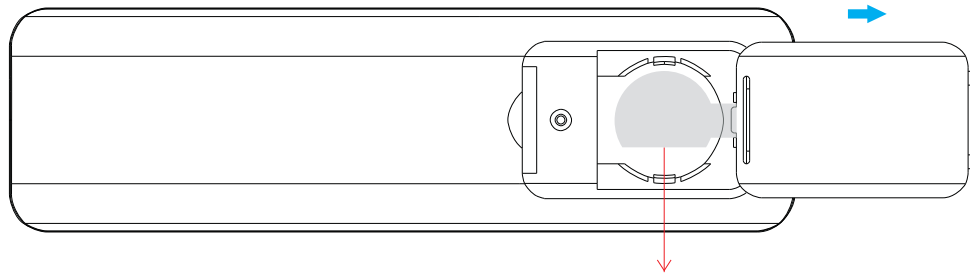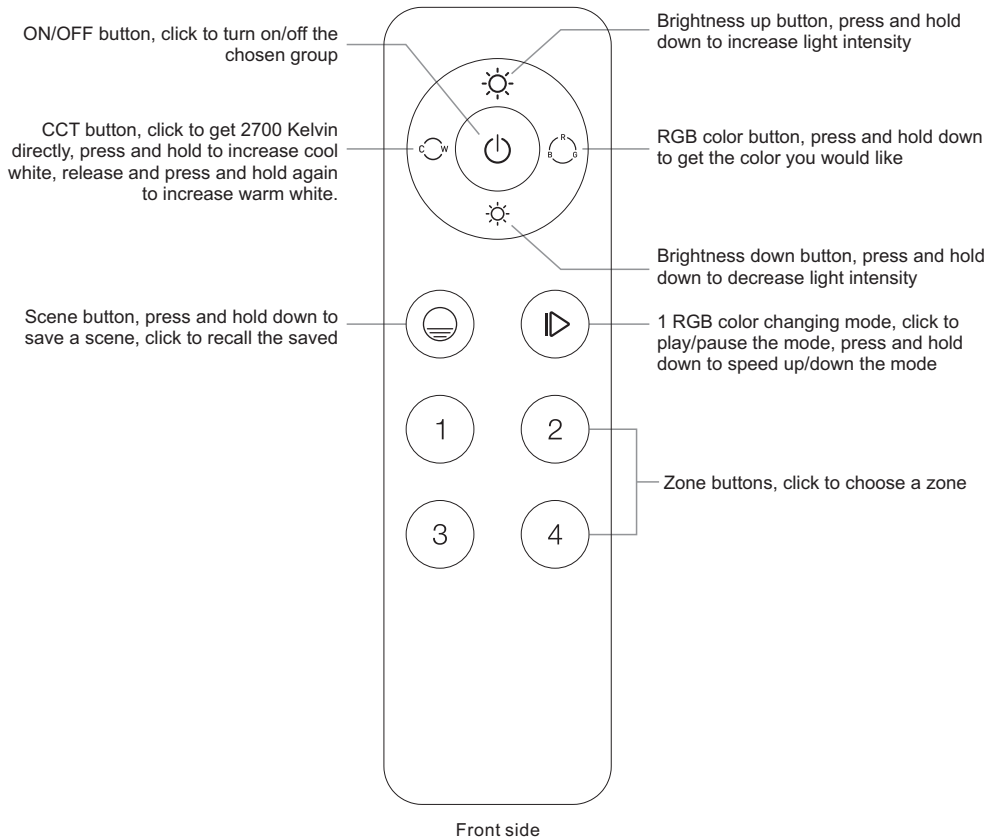

Note: Before the first use, please remove the protective film on the battery.

Product Data

Protocol	RF+Bluetooth
Operation Voltage	3VDC (CR2025)
Transmission Frequency	2.4GHz
Transmission Range (free field)	30m
Protection Type	IP20
Dimming Range	0.1%-100%
Dimension	136.3x38.9x10.7mm
Protection Grade	IP20

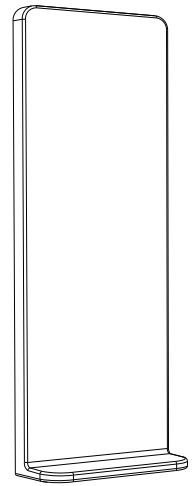


Magnetic Bracket

- RF+Bluetooth DIM, CCT, RGB 3 in 1 remote control
- Enables to control 4 zones of receivers
- Easy & quick pairing to the RF+Bluetooth receivers by simply pushing the buttons
- Mesh network for further control distance, receivers can transmit signal to each other
- Each remote can control numerous receivers
- Each receiver can be paired to max. 8 remote controls
- The controlled receiver status can be quickly synchronized to the smart APP
- Transmission range between every two neighbor devices up to 30m
- Bluetooth low power consumption technology, long battery life
- With magnet on the back, easy fasten to & remove from the bracket
- Enables to bind and control universal DIM, CCT, RGB, RGBW and RGB+CCT zigbee lighting devices

Safety & Warnings

- This device contains lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

Pair with RF+Bluetooth receiver

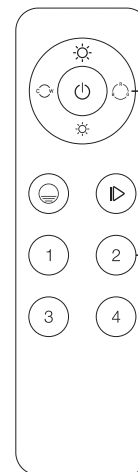

Step 1: Do wiring the receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).



Step 2: Click the "Prog" button or "Reset" button on the receiver or re-power on the receiver three times continuously to set it into pairing status

Step 4: Then immediately click any other button except zone buttons (e.g. CCT), LED lights connected with the receiver flicker once means the receiver is paired with zone 2 successfully.

Step 3: Click a zone button to select a zone (e.g. zone 2).

Note: one receiver can be paired with max 8 remote controls.

If you use multiple receivers, you have two choices:

- Option 1: have all the receivers in the same zone, like zone 1
- Option 2: have all the receivers in different zones, like zone 1, zone 2, zone 3 and zone 4